



METER NANO T EU 16882

Sealing manual

Separate the seal to be used from the presentation comb. To facilitate this it is recommended to previously fold through the joint space between pieces.




Insert the sealing through the appropriate holes in the motion sensor.



Pass the end of the wire through the remain free hole of the seal, so that on the other side may emerge +/- 4 cms.




Insert the remaining extension of the sealing wire through the hole placed on the outside of the gearbox which is available for that purpose. In order to avoid that the wire be tensioned, leave free +/- 2 cm between the seal and the hole.

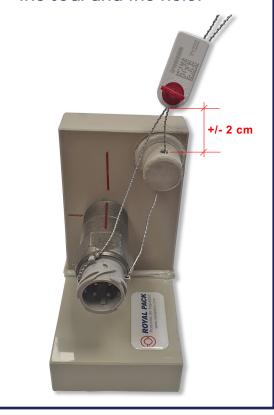


Rotate the drum flag clockwise; until the inside of the rotor is completely filled with wire and the rotor no longer can be rotated.



The tension of the sealing wire must be sufficient to prevent the motion sensor from rotating more than 90 from its correct fixing According position. standard point 4.2.2.

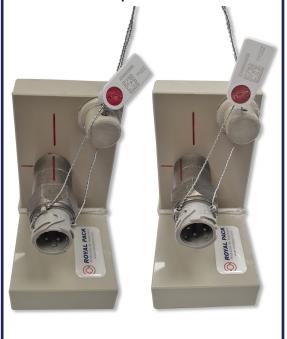



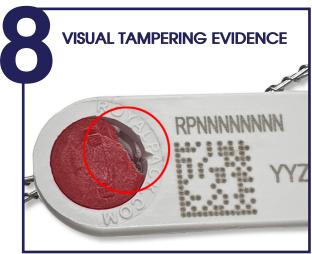

- STORAGE:
 - Close the box after use.
 - Keep in a safe, dry, ventilated place at room temperature.

Blas Cabrera, 2 nave C5 Parque Empresarial La Garena 28806 Alcalá de Henares Madrid (Spain)



(+34) 91 882 46 46







